
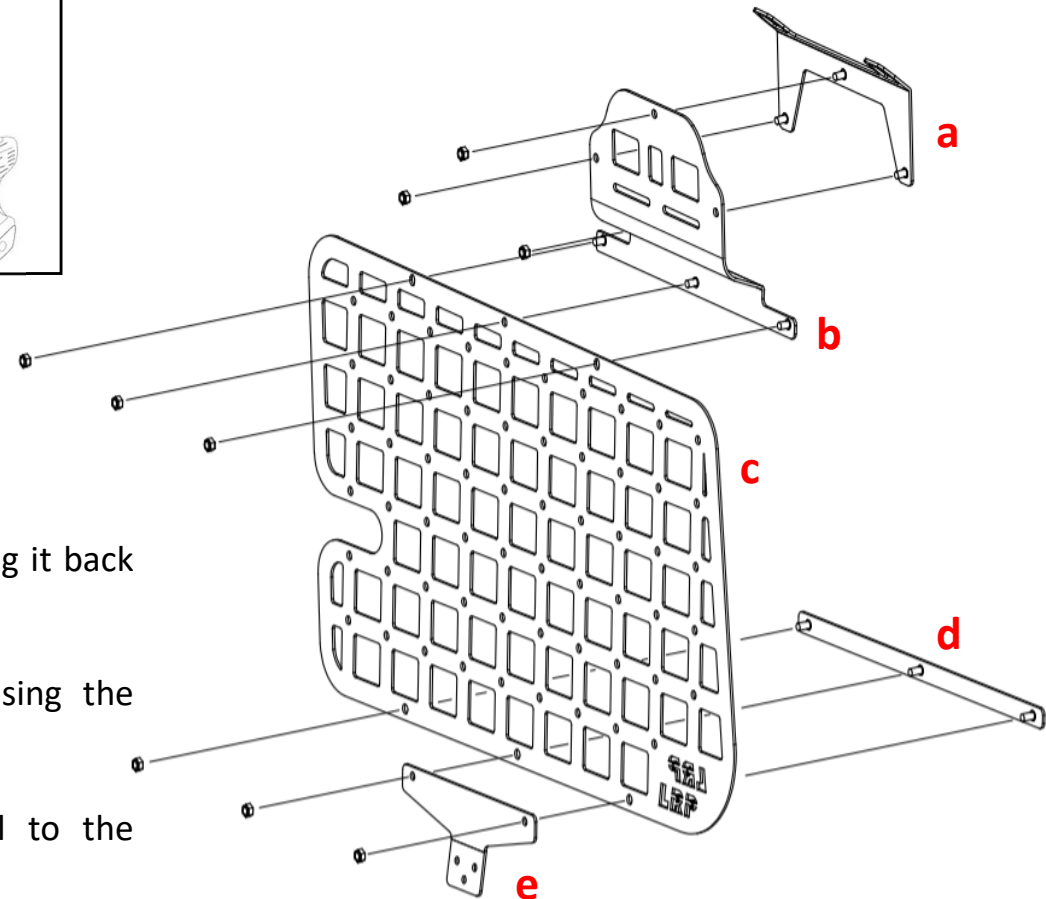


**Kit contents:**

- Nr. 1 – handle bracket (a)
- Nr. 1 – upper counter bracket (b)
- Nr. 1 – tactical panel (c)
- Nr. 1 – lower counter bracket (d)
- Nr. 1 – lower bracket (e)
- Nr. 9 – Self locking M6 nuts
- Nr. 2 – long self-tapping screws
- Nr. 3 – screws for plastic

**Strumenti necessari:**

- 10mm spanner
- screwdriver drill with 3mm bit
- Phillips screwdriver

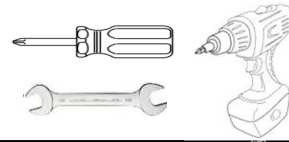

**Installation procedure, valid for both sides:**

- 1) Open the glovebox lid and remove it by pulling it back towards the tailgate
- 2) Remove the passenger handle
- 3) Install plate "a" and reinstall the handle using the supplied long self-tapping screws
- 4) Assemble the panel (b + c + e + d) as shown
- 5) Hook and fix the already assembled panel to the bracket "a"
- 6) With the screwdriver drill, make the 3 holes inside the object holder in correspondence with bracket "e" holes
- 7) Fix the lower bracket "e" using the 3 supplied screws for plastic