

LRP001011 L322 Tree Sliders – Fitting instruction







(mirror procedure for opposite side)

Package contents:

- Nr. 1 - Left Tree Slider
- Nr. 1 - Right Tree Slider
- Nr. 24 - 8x20 Inox bolt
- Nr. 24 - M8 Riv nuts

Tools required:

- Allen wrench 5mm
- Plastic trim removal tool
- Phillips screwdriver
- Rivnut tool / 10,5mm drill bit

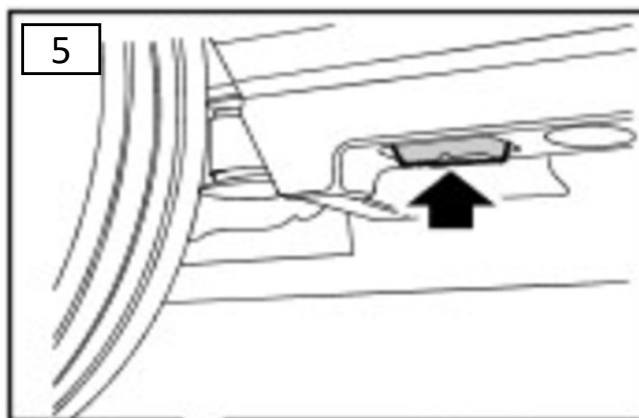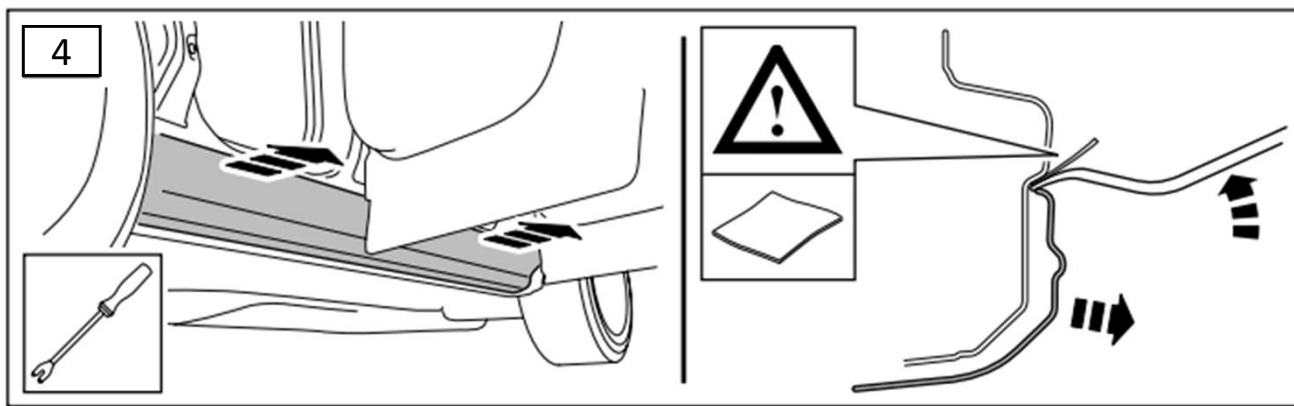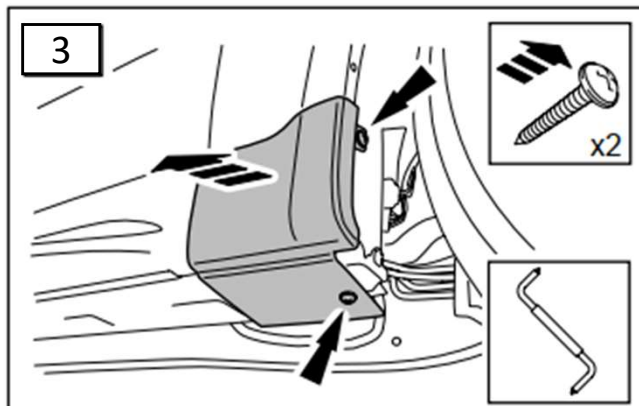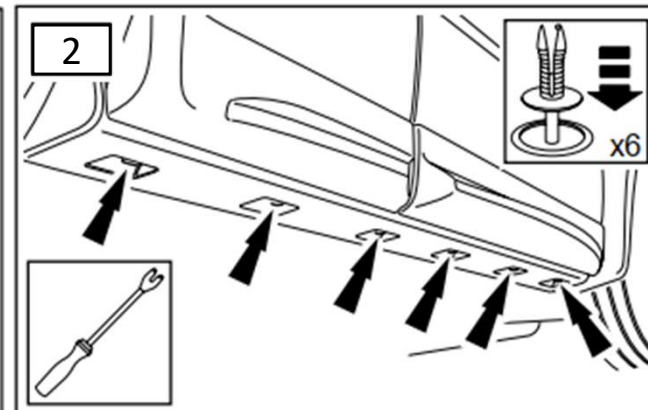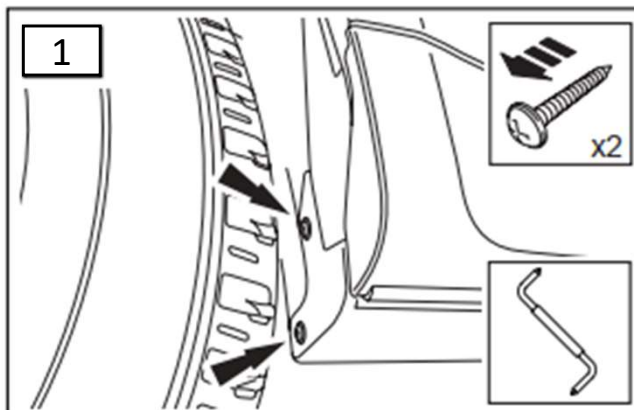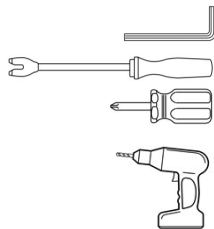

5. Using the plastic trim removal, remove both Pad - Jacking Location
6. Using 10,5mm bit, enlarge 12 existing holes (6 on side, 6 underneath)
7. Using Rivnut tool, install the provided M5 rinuts
8. Install the Tree Slider and tight it using provided M8 bolts. M6 bolts are for inner side:

